

Atari 2600 Junior – NTSC

1. Remove all components shown in **RED**.
2. Cut all traces marked in **PURPLE**.
3. Lift or cut all pins marked in **YELLOW** (*See Below)
4. Connect all the points marked in **BLUE** to the corresponding pads on the Atari 2600 MultiMod Board.
5. Use double sided tape to mount the MultiMod board where the RF box used to be.

* You can either use a separate toggle switch to pause the game by connecting a switch between SW1 and SW2 or you can just connect SW1 to the point shown and lift the pin marked in **YELLOW** above and it can be controlled using the B&W switch on the lid of the console.

As this is a NTSC console, you can use 2 audio channels, so you can use AUD-IN1 & AUD-IN2 -> AUD-OUT1 & AUD-OUT2 using Red and White RCA Phono plugs.

Connect the AUD-OUT1, AUD-OUT2 and VID-OUT to corresponding RCA Phono sockets mounted on the rear of the console and find a suitable ground point for those as well.

